

## OUTDOOR BLINDS

### SIDE CHANNEL AWNING – Fitting Instructions

#### Fitting the Side Channels

Place the Channels inside the window box. The brackets need to be at the top and extending out the back of the Channels. Hold the Channel so the front edge is sitting flush against the front edge of the window box and drill through the side wall of the Channel into the side of the window box where the screws will be fastened. Do this at the top, bottom and in the middle.




Back edge of the Channel




Edge of Channel flush with edge of window frame

#### Tension the Roller Pin

Attach a shifter to the Roller Pin. Wind the shifter clockwise to apply tension. Use the size chart to determine how many turns of tension are required. Do NOT let go of the shifter while tensioning as the spring has a lot of force in it. Do NOT try and over tension the spring. When the right amount of tension has been applied, drop the holding tab down and wind the spring back until it engages the pin.

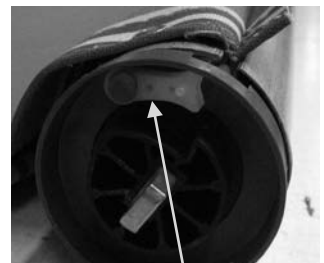

Holding tab dis-engaged

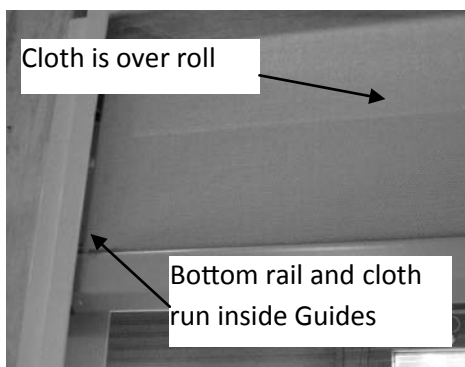


Cloth is over roll

Bottom rail and cloth run inside Guides

#### Attach the Cloth to the Side Channels

Take the plastic cover off the Cloth. Hold the blind so the cloth is over roll towards you. Holding it on an angle position the bottom rail inside the Channels before inserting the blind into the brackets.

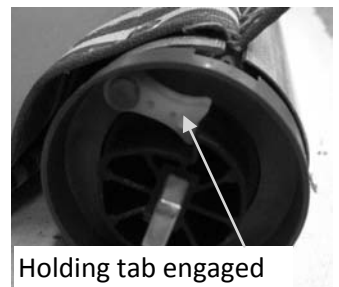

Holding tab engaged

Insert the round pin into the left hand side first. Make sure the pin goes in the hole, not sitting on top of the groove. Drop the spring side pin into the slot second.

To raise or lower the blind twist the bottom rail to release the Lock. With the lock released you can pull the blind up and down.